

QUICK START GUIDE



APP FEATURES

How it works

1. Hold the touch button for 3 seconds to turn on the device.
2. A blue light will flash to indicate that the device is working. A red light will flash to indicate an alert.
3. Hold the touch button for 8 seconds to turn off the device.




Step 1

Search "SPACEbands" on the Apple / Google Play App Store to download our app.



Step 2

Enable Bluetooth on your phone (in your general phone settings).

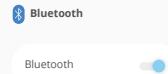

Step 3

Ensure that your SPACEband device is within a 3 metre proximity of your phone or tablet.



Step 4

Open our app. Tap "Scan" in the top right corner. Click on the device that appears (default name is on the inside of your SPACEband).



Step 5


Check that this switch is turned on. It enables the distancing alert function. Next, configure your default settings.



CHARGING YOUR DEVICE: Remove the silicone casing to charge your device. When your device is charging a blue light will appear. The light will turn off when your SPACEband is fully charged.

ID SETTING

GROUP ID: You can setup bubbles / groups by renaming your device's group ID. Users within the same group will not trigger an alarm when they are close to each other.

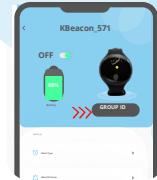

ALARM DISTANCING

SPACEbands have adjustable alert distances : 0 - 1m | 0 - 2m | 0 - 3m . Your SPACEband will beep / vibrate if another device is within the chosen proximity of your distancing settings.



ALARM TYPE

You can select your alert. Your device can beep, vibrate or light up.


You can also select the frequency of your alerts 500ms | 1s | 2s | 5s .



SLEEP TIME

You can set an automatic sleep time for your device.

Your device will not alert at this time even if it is near another device.

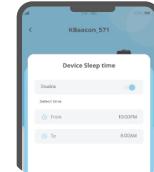

CONTACT TRACING

Here you can view contact tracing history reports.

SPACEbands can track when devices have come into contact and the duration of time that they have spent together.

Press the export icon to forward reports to your email.

